

SPKR-IP-CS-IC

Getting Started Guide



Introduction

The SPKR-IP-CS-IC is a 2'x2' IP Ceiling Speaker for use with Singlewire InformaCast software. The internal amplifier delivers a maximum of 8 watts of audio and is powered by Power over Ethernet (PoE - 802.3af compatible).


The SPKR-IP-CS-IC is DHCP enabled and will be automatically recognized by InformaCast when connected to a Multicast enabled network. This <u>Getting Started Guide</u> covers basic hardware installation and software configuration of the SPKR-IP-CS-IC.

Specifications

- 8" O.D. Speaker
- 8 Watt Amplifier
- PoE (802.3af)
- Integrated Back Box
- Average Sensitivity 92 dB SPL, 1W/1M
- Maximum Power rating 15W @ 8 Ohms
- Magnet Type & Weight BeFe Ceramic, 5 oz. Nominal
- Frequency Response 65 Hz 17 kHz EIA 426A Standard
- Nominal Coverage Angle 100° Included Angle -6 dB / 2 kHz, Half space

Installation

The controls, connectors and LEDs for the SPKR-IP-CS-IC are located on a faceplate on top of the speaker. There is also a green LED in the speaker grill that matches the state of the **Ready** LED.

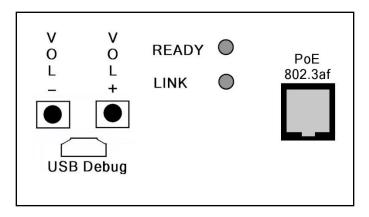

- Connect the SPKR-IP-CS-IC ceiling speaker to a PoE (802.3af) network cable. The SPKR-IP-CS-IC will power up within 5 seconds and request 15.4 watts from the Power Source Equipment
- The red Link LED will turn solid
- The red Ready LED will flash 4x per second
- Once the SPKR-IP-CS-IC ceiling speaker is detected by InformaCast, the Ready LED will turn solid
- Record the ID# from the label on back of the SPKR-IP-CS-IC for use during software configuration.
- Optionally, label the speaker grill with one of the extra ID# labels included in the box
- Install the connected Speaker in a 2'x2' ceiling grid and verify that the green Ready LED in the speaker grill is on solid
- Please refer to the Application Note IP7 for InformaCast Installation and Configuration Guide available at www.digitalacoustics.com/support/application-notes/ for additional information on installation and setup

Digital Acoustics Technical Support www.digitalacoustics.com/support

InformaCast Software

Singlewire InformaCast Software provides the ability to send audio to one or more IP Speakers from a VoIP based phone system.



Please contact Singlewire (www.singlewire.com) for information on installing and configuring the InformaCast software.

- Open a Web browser to the InformaCast server and select the Speakers menu option
- Look for the InformaCast has detected new IP Speakers on the network message and click the View button



 Match the ID# from the label on the back of the SPKR-IP-CS-IC with the last six digits of the MAC address listed in the Web browser and press the Add button



 Assign a Name, Description and Volume level and then press the Add button to complete the installation of the SPKR-IP-CS-IC

Internal Web browser

The SPKR-IP-CS-IC can be accessed via a Web browser to set options and check the status by entering its IP Address into a web browser. The default User Name and Password is: admin

<u>Digital Acoustics</u> IP7 for InformaCast	
MAC Address	00:1b:61:04:79:99
Version Status	v1.1.1.5 Registered to 1 of 1 servers
Connection Type	DHCP
IP Address	10.3.3.21
Subnet Mask	255.255.255.0
Gateway	10.3.3.1
DNS Server 1	192.168.254.237
DNS Server 2	0.0.0.0
User Name: New Password: Re-enter Password: Beep on Connection: Activate Relay on Speaker	admin Submit Submit
TFTP IP Address: Firmware Filename:	Upgrade Firmware
	Reboot
Copyright 2013, Digital Acoustics LLC	

IP7 and Digital Acoustics® are trademarks of Digital Acoustics LLC.

Other trademarks are the property of their respective owners.

All Rights Reserved ©2017